
 






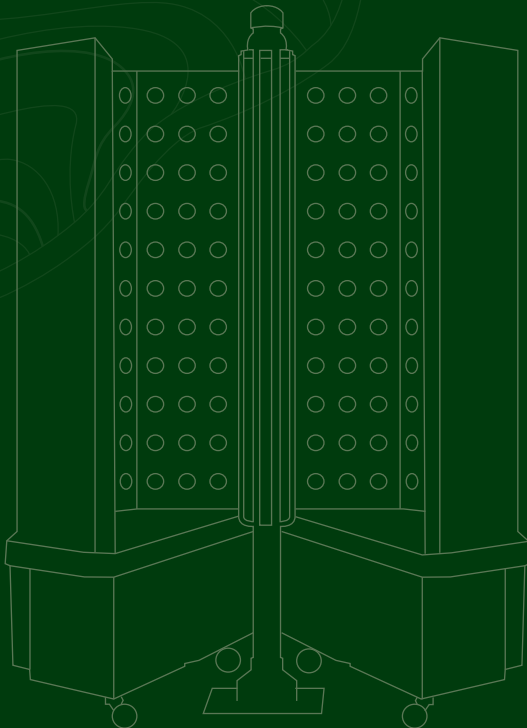


ROOT CHAMBERS 8 Root Chambers Notches at top of panel.			
PANELS 32 Panels Plant spaces face outward, tabs face downwards.			
DRIP LINES 1 Left Drip Line 1 Right Drip Line Left drip line has Y-fitting.			
TOP CAPS 8 Top Caps			
LIGHT TOWER 1 Light Tower Metal Base 3 Base Pins 1 Light Tower			
Items for Growing			
LIGHT TIMER			
PANEL PLUGS 225 Panel Plugs			
GROWER TOOLKIT TDS Meter Measuring Cup Measuring Spoons Bristle Brush pH Test Kit			
SUPPLY KIT Rockwool Flats Nursery Tray Nutrient B Nutrient A pH Down Seeds			


ITEMS FOR GROWING:

Please refer to the Grow Guide for instructions on how to set up the light timer and install the black panel plugs that came with your Flex Farm.

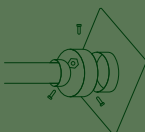

WARRANTY AND RETURN INFORMATION:
farmative.forkfarms.com

FARMATIVE GROW CENTER:
farmative.forkfarms.com



✉ support@forkfarms.com

📞 1-877-886-7736

 


FLEX FARM

Assembly Manual

Scan the QR code to view the Flex Farm Assembly Video



Items for Assembly	
CASTER UNIT 1 Left Caster Frame 1 Right Caster Frame 1 Cotter Pin	
TANKS 1 Left Tank 1 Right Tank	
DRAINAGE VALVE TUBING Valve has open/closed position.	
TANK SCREENS 2 Tank Screens	
TANK LIDS 1 Left Lid 1 Right Lid Left tank lid has a secondary small hole.	<div> <div>Left</div> <div>Right</div> </div> 
TANK KNOBS 2 Knobs 2 Screws	
PUMP BOX 1 Pump 1 1/2 Inch Fitting 1 Pump Bag	
VERTICAL IRRIGATION LINE	
TANK LID PLUGS 2 Tank Lid Plugs	

Before Assembly


SELECT YOUR LOCATION

- 3 ft x 6 ft x 7 ft clearance (91.5 cm x 183 cm x 213.5 cm).
- Temperature-controlled 68°F to 75°F (20°C to 24°C).
- Floor that supports at least 325 pounds (147.4 kg).
- Direct access to grounded electrical outlet.

Step 1


CASTERS AND DRAINAGE VALVE TUBING

Set the right and left sides of the caster frame side-by-side on the floor, wheel side down. Line up the holes and insert the cotter pin through the overlapped holes.

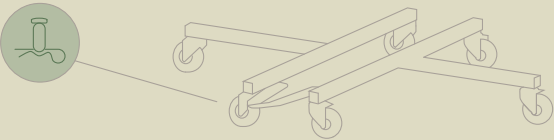


Align the grooves on the bottom of the tanks to the assembled caster. Gently press each tank into place.

Line up the drainage valve tubing to the back left and right tank fittings. Ensure the valve “open and close” tab is face up.

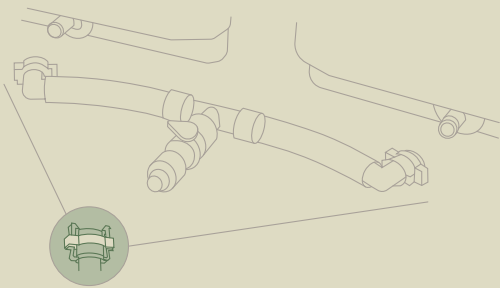

Check the two red locks located at the ends of the drainage valve tubing are in the open position. This is when the red locks are closest to the elbow joint in the tubing.

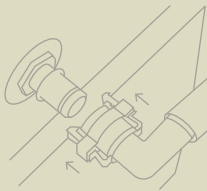


To attach the drainage valve tubing to tanks, start on the left side and push the red lock on the tubing towards the tank fitting. Click into place. Two clicks indicate it is secure. Repeat on the right.



On the inside of the left tank, attach the tank screen to the fitting by screwing into the fitting clockwise. Hand tighten until secure. Repeat on the right tank.

To check for proper assembly, pull firmly on the drain valve. It is secure if the tubing does not detach from the tanks.

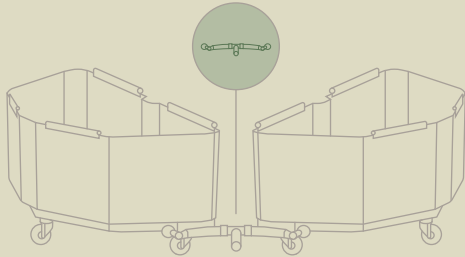


Step 2

TANKS AND PUMP


Attach tank knobs to each tank lid by inserting a screw through each hole in the lid from the inside and tighten.

Identify the left tank and right tank lids. The left lid has a small round hole in addition to the large oval opening.

Put the tank lids on the tanks. Position the tank knobs towards the front (where the caster opens). Push firmly down on all edges to ensure a secure fit.

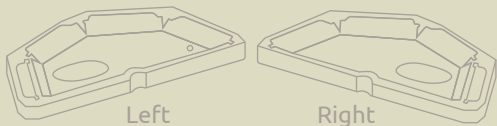

Locate the water pump box. Identify the 1/2 inch fitting and attach to the body of the pump.

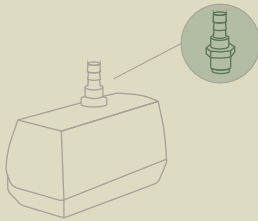


Set the pump on top of the left tank lid and thread the power cord down through the large oval opening and then back out of the tank through the small round opening in the lid.

Identify the end of the vertical irrigation without the valve. Insert this end into the tank through the round opening. Pull the vertical irrigation line out of the tank through the large oval opening and connect to the pump 1/2 inch fitting.

Place the pump into the pump filter bag, allowing the power cord and vertical irrigation line to exit the bag. Tie the pump filter bag closed and place the pump into the bottom of the tank through the oval opening.


Gently pull the vertical irrigation line and power cord exiting the tank to position the pump near the back of the tank.

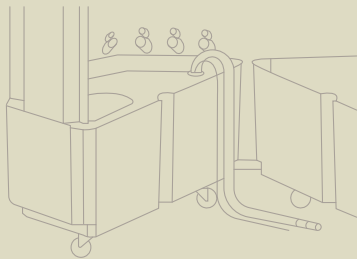


Put the lid plugs on the left and right oval tank openings on the lids.

Step 3

ROOT CHAMBERS AND PANELS

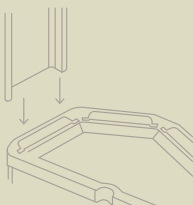


 Starting from the back, insert the side of the root chamber without notches into each tank through slot in the tank lid. Repeat until all eight are inserted.




Insert four panels, tab side first, into the top of each root chamber by sliding them through the root chamber rails. The plant spaces should face outward. Repeat for all 32 panels.

Start with the left drip line (has Y-fitting). Align the drip line with the top of the root chambers so valves are at the front of the Flex Farm and the drip line holes line up with plant spaces. Press the drip line into the root chambers to lock in place.

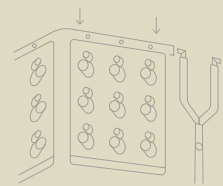

Connect the Y-fitting attached to the left drip line to the right.

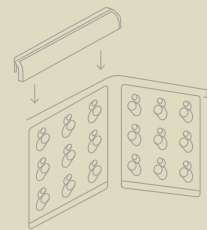

Connect the bottom of the Y-fitting to the vertical irrigation line attached to the pump.


Install a top cap on each root chamber to secure the drip lines. The long side of the top cap should be facing inwards on the Flex Farm toward the panel.

Step 4

LIGHT TOWER

Locate the light tower, base and three base pins. Carefully lay the light tower horizontally on the ground. Remove the three base pins and set them aside.

Lift up the bottom of the light tower and slide on the base. Turn until one side is flat on the ground and the pin holes align.

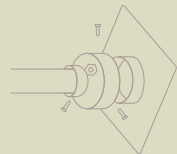

Insert the first pin securely, and repeat the process for the remaining two pins. Grab the light tower by the handle and stand it up.

WARNING: ELECTRICAL HAZARD. TO AVOID SEVERE INJURY OR DEATH, ENSURE THE LIGHT TOWER IS DISCONNECTED/UNPLUGGED FROM THE ELECTRICAL OUTLET DURING ASSEMBLY.